


vogue™ Traditional Series Finial Cap


Installation Instructions

- These instructions assume that you have already properly installed the vitalTM Cluster Box Unit (CBU 1570 series). If the CBU has not yet been installed, please refer to the instructions that came with the vitalTM CBU, noting the clearance specification.
- Attach the Finial to the top of the Decorative Cap by using the three 1/4-20 X 1/4" set screws. Do not over tighten.
- Secure the Decorative Cap unit to the CBU using the four 1/4-20 X 1/2" set screws.
- Make sure the short boss on the underside of the Cap is to the front. The roof should sit level with the ground after assembly. Do not over tighten and make sure all screws are tightened evenly.

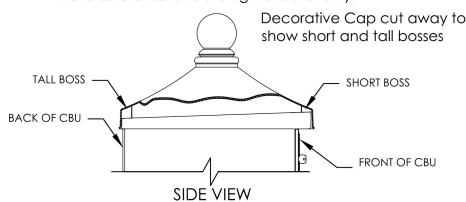

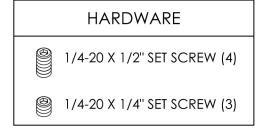

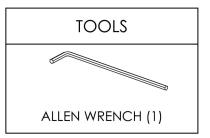

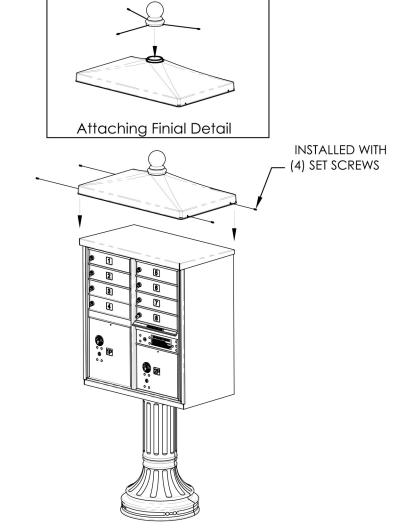



VOGUE [™] TRADITIONAL SERIES - FINIAL CAP


WebLife Stores LLC
PO Box 20338,Panama City Beach, FL 32417
www.budgetmailboxes.com • (866) 707-0008

PRODUCT SERIES:

MODEL FINIAL CAP REV A
SCALE NONE LAST REV D
8/2/2013

DRAWING NUMBER 91552

DRAWN BY

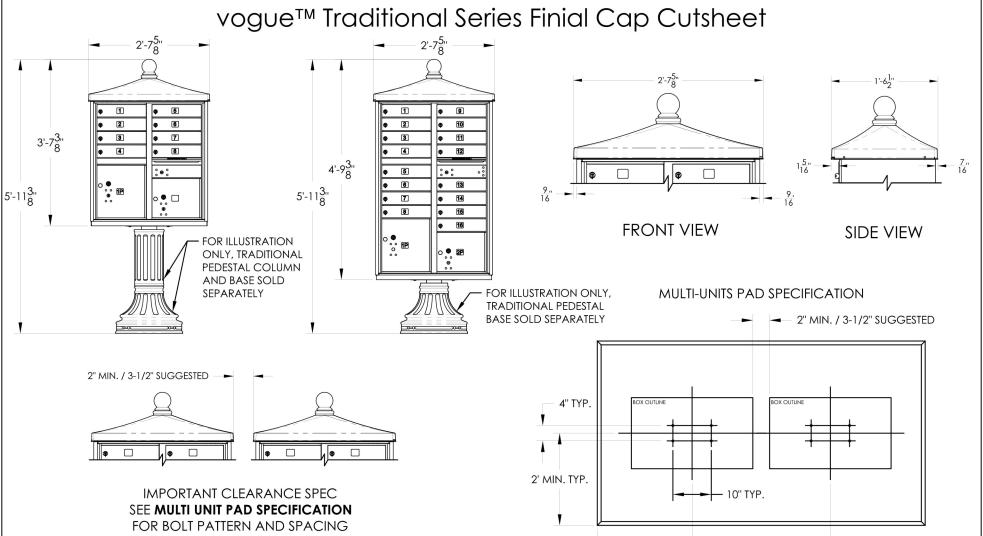

NOTES:

SERIES CBU.

- 1. TRADITIONAL FINIAL CAP DESIGN REQUIRES ADDITIONAL SPACE BETWEEN CBUS. FOR MULTIPLE CBU INSTALLATIONS SEE IMPORTANT
- CLEARANCE SPEC ABOVE. 2. TRADITIONAL FINIAL CAP AND TRADITIONAL PEDESTAL COLUMN AND BASE SOLD SEPARATELY.
- 3. TRADITIONAL FINIAL CAP AVAILABLE IN ALL STANDARD CBU POWDER COAT FINISHES.
- 4. TRADITIONAL FINIAL CAP INSTALLED USING PROVIDED SET SCREWS.
- 5. TRADITIONAL FINIAL CAP DESIGNED TO FIT OVER FLORENCE 1570



2' MIN. TYP.

PRODUCT SERIES:

BudgetMailboxes

WebLife Stores LLC PO Box 20338, Panama City Beach, FL 32417 www.budgetmailboxes.com • (866) 707-0008 MODEL FINIAL CAP REV SCALE

DRAWING NUMBER 91552

3' TYP

VOGUE [™] TRADITIONAL SERIES - FINIAL CAP

NONE DRAWN BY **AFD**