


## Universal Replacement Lock and Key Set (5120) Instructions

If you have any questions about how to assemble or use this replacement lock, please call us directly at (800) 464-7491 or contact us at [www.architecturalmailboxes.com](http://www.architecturalmailboxes.com).

This Universal Replacement Lock is suitable for use on any Architectural Mailboxes locking mailbox. It comes with three different engagement cams - one attached to the lock itself and two others packed with the lock. The short straight cam should work with most locking mailboxes made by Architectural Mailboxes. However, due to normal manufacturing variation, it may be necessary to use one of the other included cams. After you've attached the lock as described below, you can fine tune the best cam by bending it slightly inward or outward until the engagement is to your liking.

- 1 Remove the existing lock. If you have access to the rear of the lock, simply remove the cam with a screwdriver and the large nut with a wrench or pliers. Slide the lock off the door.

If you don't have access to the rear of the lock (e.g., lost keys), drill out the center of the lock with a 1/8" diameter drill bit until the internal mechanism is broken. After the internal mechanism is drilled out, insert a screwdriver into the key way and force the lock open. Remove the lock as described above.

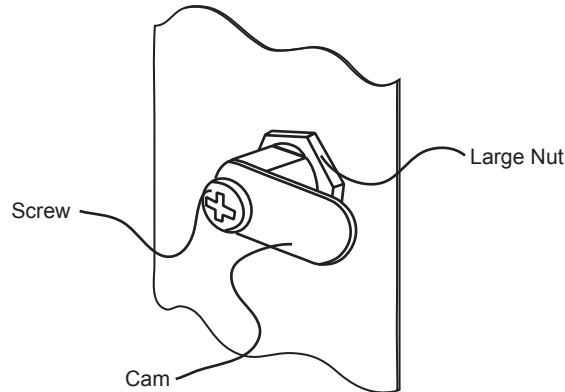

- 2 Insert the new lock into the door hole and secure using the large nut. You may need to unlock the lock to fit it into the hole with the cam on.

Test the lock to see if the cam properly engages the mailbox body. If it doesn't engage as desired, try a different cam or fine tune the cam by bending it inward or outward as necessary.



[www.architecturalmailboxes.com](http://www.architecturalmailboxes.com) (800) 464-7491

© 2006, Architectural Mailboxes


## Universal Replacement Lock and Key Set (5120) Instructions

If you have any questions about how to assemble or use this replacement lock, please call us directly at (800) 464-7491 or contact us at [www.architecturalmailboxes.com](http://www.architecturalmailboxes.com).

This Universal Replacement Lock is suitable for use on any Architectural Mailboxes locking mailbox. It comes with three different engagement cams - one attached to the lock itself and two others packed with the lock. The short straight cam should work with most locking mailboxes made by Architectural Mailboxes. However, due to normal manufacturing variation, it may be necessary to use one of the other included cams. After you've attached the lock as described below, you can fine tune the best cam by bending it slightly inward or outward until the engagement is to your liking.

- 1 Remove the existing lock. If you have access to the rear of the lock, simply remove the cam with a screwdriver and the large nut with a wrench or pliers. Slide the lock off the door.

If you don't have access to the rear of the lock (e.g., lost keys), drill out the center of the lock with a 1/8" diameter drill bit until the internal mechanism is broken. After the internal mechanism is drilled out, insert a screwdriver into the keyway and force the lock open. Remove the lock as described above.

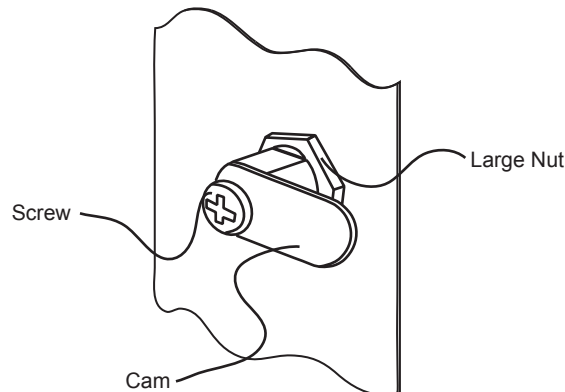

- 2 Insert the new lock into the door hole and secure using the large nut. You may need to unlock the lock to fit it into the hole with the cam on.

Test the lock to see if the cam properly engages the mailbox body. If it doesn't engage as desired, try a different cam or fine tune the cam by bending it inward or outward as necessary.



[www.architecturalmailboxes.com](http://www.architecturalmailboxes.com) (800) 464-7491

© 2006, Architectural Mailboxes